



Ai-M62-12F Specification

Version V1.0.1

Copyright ©2023

Document resume

| Version | Date | Develop/revis content | Edition | Approve |
|---------|------------|--|-------------|-----------|
| V1.0.0 | 2023.03.23 | First Edition | NanNan Yuan | Ning Guan |
| V1.0.1 | 2023.11.17 | 1、Update the chip block diagram and the supported peripheral interfaces; 2、Add important statements | Ning Guan | Hong Xu |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

Content

| | |
|--|----|
| 1. Product overview | 4 |
| 1.1. Characteristics | 5 |
| 2. Main parameters | 6 |
| 2.1. Electrostatic requirements | 6 |
| 2.2. Electrical characteristics | 7 |
| 2.3. Wi-Fi radio frequency performance | 7 |
| 2.4. BLE RF performance | 8 |
| 2.5. Power consumption | 8 |
| 3. Appearance size | 9 |
| 4. Pin definition | 11 |
| 5. Schematic diagram | 13 |
| 6. Antenna parameters | 14 |
| 6.1. Schematic of Antenna Test Prototype | 14 |
| 6.2. Antenna s parameter | 14 |
| 6.3. Antenna Gain and Efficiency | 15 |
| 6.4. Antenna field pattern | 15 |
| 7. Design guidance | 16 |
| 7.1. Application guidance circuit | 16 |
| 7.2. Recommended PCB package size | 17 |
| 7.3. Antenna layout requirements | 17 |
| 7.4. Power supply | 18 |
| 7.5. GPIO | 18 |
| 8. Storage conditions | 19 |
| 9. Reflow Soldering Curve | 19 |
| 10. Product packaging information | 20 |
| 11. Contact us | 20 |
| Disclaimer and copyright notice | 21 |
| Notice | 21 |
| Important statement | 22 |

1. Product overview

Ai-M62-12F is a Wi-Fi 6 + BLE5.3 module developed by Shenzhen Ai-Thinker Technology Co., Ltd. The module is equipped with BL616 chip as the core processor, supports Wi-Fi 802.11b/g/n/ax protocol and BLE protocol, and supports Thread protocol. The BL616 system includes a low-power 32-bit RISC-V CPU with floating-point unit, DSP unit, cache and memory, with a maximum dominant frequency of 320M.

The Ai-M62-12F module has rich peripheral interfaces, including USB2.0, SDU, SD / MMC (SDH), SPI, UART, I2C, I2S, PWM, GPDAC, GPADC, ACOMP and GPIO, etc. It can be widely used in audio and video multimedia, Internet of Things (IoT), mobile devices, wearable electronic devices, smart homes and other fields.

The Ai-M62-12F module Sec Eng module supports AES/SHA/PKA/TRNG and other functions, supports image encryption and signature startup, and meets various security application requirements in the Internet of Things field.

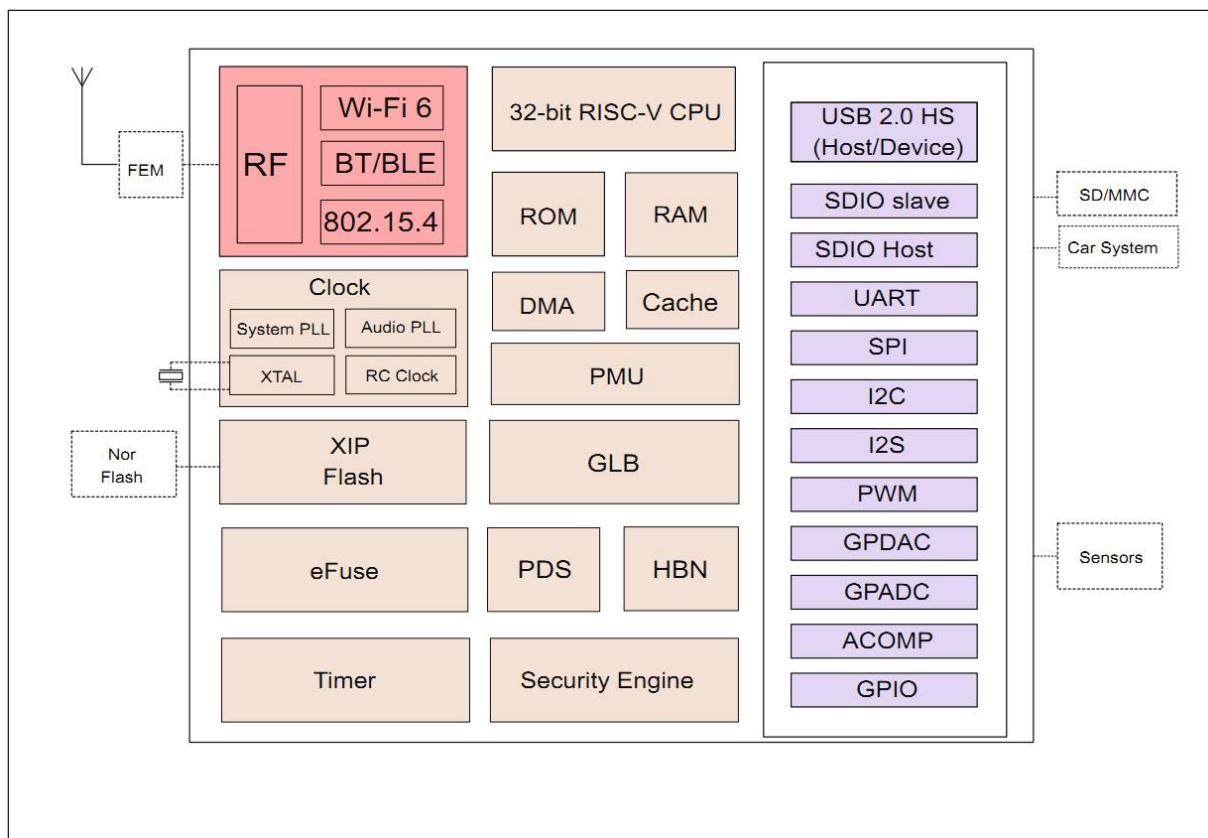


Figure 1 Main chip architecture diagram

1.1. Characteristics

- SMD-22 package
- Supports 2.4GHz operating frequency band
- Support IEEE 802.11 B/g/n/ax
- Support BLE5.3
- Support Thread
- Support Wi-Fi/BLE/Thread coexistence
- Wi-Fi security support WPS/WEP/WPA/WPA2/WPA3
- Supports 20/40MHz bandwidth, 1T1R, maximum rate 229.4 Mbps
- Support STA, SoftAP, STA + SoftAP and sniffer modes
- 32-bit RISC-V CPU with FPU and DSP, with a maximum dominant frequency of 320M
- 532KB SRAM, 128KB ROM, 4Kb eFuse
- Support USB2.0, SDU, SD / MMC (SDH), SPI, UART, I2C, I2S, PWM, GPDAC, GPADC, ACOMP and GPIO, etc
- Integrated RF Balun, PA/LNA
- Support for safe startup and safe debugging
- Support XIP QSPI On-The-Fly AES decryption (OTFAD)
- Support TrustZone
- Support AES-CBC/CCM/GCM/XTS mode
- Support MD5, SHA-1/224/256/384/512
- TRNG (True Random Number Generator) is supported
- Support PKA (Public Key Accelerator) for RSA/ECC
- BLE-enabled Wi-Fi fast connection
- Universal AT command can be used quickly.
- Supports secondary development and integrates Windows and Linux development environments

2. Main parameters

Table 1 Description of Main Parameters

| | |
|------------------------------|--|
| Model | Ai-M62-12F |
| Package | SMD-22 |
| Size | 24.0*16.0*3.1(±0.2)mm |
| Antenna | onboard antenna |
| Frequency | 2400~2483.5MHz |
| Operating temperature | -40 °C ~ 85 °C |
| Storage temperature | -40°C ~ 125°C, < 90%RH |
| Power supply | The power supply voltage is 2.97V ~ 3.6V, and the power supply current is ≥ 500mA. |
| Interface | USB2.0, SDU, SD / MMC (SDH), SPI, UART, I2C, I2S, PWM, GPDAC, GPADC, ACOMP and GPIO, etc |
| IO | 15 |
| UART rate | Default 115200 bps |
| Security | WPS/WEP/WPA/WPA2/WPA3 |
| Flash | Default 4MByte, maximum support of 16MByte |

2.1. Electrostatic requirements

Ai-M62-12F are electrostatic sensitive equipment, special precautions need to be taken when handling.



Figure 2 ESD preventive measures

2.2. Electrical characteristics

Table 2 Table of Electrical Characteristics

| Parameters | Condition | Min. | Typical value | Max. | Unit |
|----------------|-----------|------|---------------|-----------|------|
| Supply voltage | VDD | 2.97 | 3.3 | 3.6 | V |
| I/O | VIL | - | - | 0.3*VDDIO | V |
| | VIH | - | 0.7*VDDIO | - | V |
| | VOL | - | - | 0.1*VDDIO | V |
| | VOH | - | - | 0.9*VDDIO | V |
| | IMAX | - | - | 15 | mA |

2.3. Wi-Fi radio frequency performance

Table 3 Wi-Fi RF Performance table

| Description | Typical value | | | Unit |
|--------------------------------|----------------|---------------|------|------|
| Spectrum range | 2400~2483.5MHz | | | MHz |
| Output power | | | | |
| Mode | Min. | Typical value | Max. | Unit |
| 11ax mode HE40,PA output power | - | 16 | - | dBm |
| 11ax mode HE20,PA output power | - | 17 | - | dBm |
| 11n mode HT40,PA output power | - | 19 | - | dBm |
| 11n mode HT20,PA output power | - | 19 | - | dBm |
| In 11g mode, PA output power | - | 19 | - | dBm |
| In 11b mode, PA output power | - | 22 | - | dBm |
| Receiving sensitivity | | | | |
| Mode | Min. | Typical value | Max. | Unit |
| 11b,1 Mbps | - | -98 | - | dBm |
| 11b,11 Mbps | - | -90 | - | dBm |
| 11g,6 Mbps | - | -93 | - | dBm |
| 11g,54 Mbps | - | -76 | - | dBm |
| 11n,HT20 (MCS7) | - | -73 | - | dBm |
| 11ax,HE20 (MCS9) | - | -70 | - | dBm |
| 11ax,HE40 (MCS9) | - | -67 | - | dBm |

2.4. BLE RF performance

Table 4 BLE RF Performance table

| Description | Typical value | | | Unit |
|------------------------------|----------------|---------------|------|------|
| Spectrum range | 2400~2483.5MHz | | | MHz |
| Output power | | | | |
| Mode | Min. | Typical value | Max. | Unit |
| 1Mbps | - | 10 | 15 | dBm |
| 2Mbps | - | 10 | 15 | dBm |
| Receiving sensitivity | | | | |
| Mode | Min. | Typical value | Max. | Unit |
| 1Mbps sensitivity @ 30.8%PER | - | -99 | - | dBm |
| 2Mbps sensitivity @ 30.8%PER | - | -97 | - | dBm |

2.5. Power consumption

The following power consumption data is based on a 3.3V power supply and measured at an ambient temperature of 25°C.

- The POUT power for all transmit modes is the measured value at the antenna interface.
- All transmission data are measured in the continuous transmission mode based on a duty cycle of 100%.

Table 5 Power consumption table

| Mode | Min. | Average | Max. | Unit |
|--|------|---------|------|------|
| Transmit 802.11B, 11Mbps, POUT = + 22dBm | - | 442 | - | mA |
| Transmit 802.11g, 54Mbps, POUT = + 19dBm | - | 296 | - | mA |
| Emission 802.11n, MCS7, POUT = + 19dBm | - | 301 | - | mA |
| Launch 802.11ax, MCS9, POUT = + 17dBm | - | 269 | - | mA |
| Receive 802.11B, packet length 1024 bytes | - | 59 | - | mA |
| Receive 802.11g, packet length 1024 bytes | - | 59 | - | mA |
| Receive 802.11n, packet length 1024 bytes | - | 59 | - | mA |
| Receive 802.11ax, packet length 1024 bytes | - | 59 | - | mA |

3. Appearance size

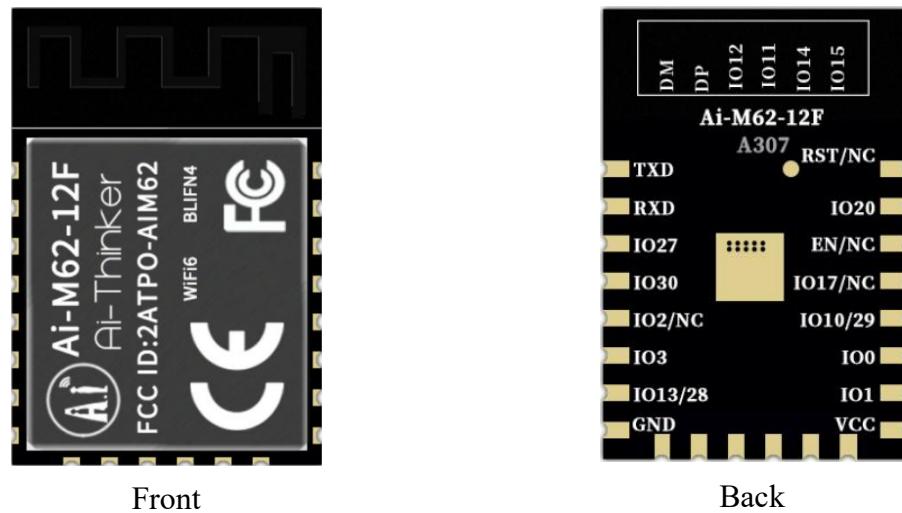


Figure 3 appearance diagram (Rendering diagram is for reference only, subject to actual objects)

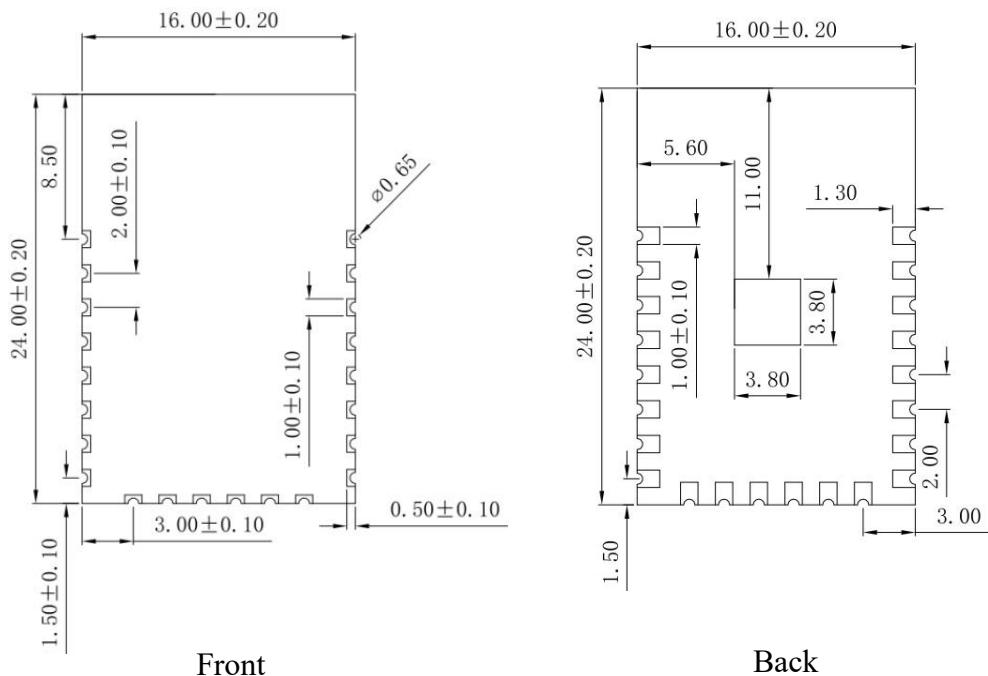


Figure 4 dimension diagram

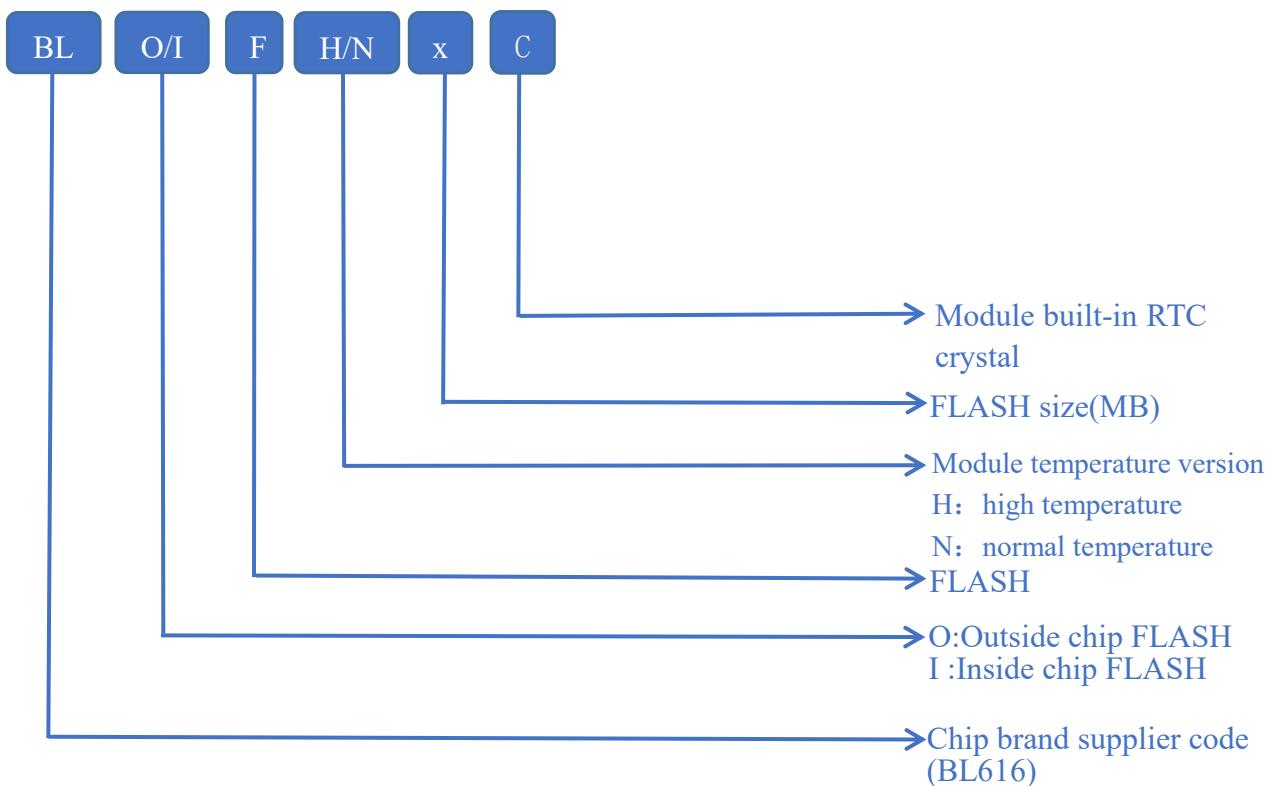


Figure 5 Screen Screen Representative Information of Shields

4. Pin definition

A total of 22 pins are connected to the Ai-M62-12F module, as shown in the pin diagram, the pin function definition table is an interface definition.

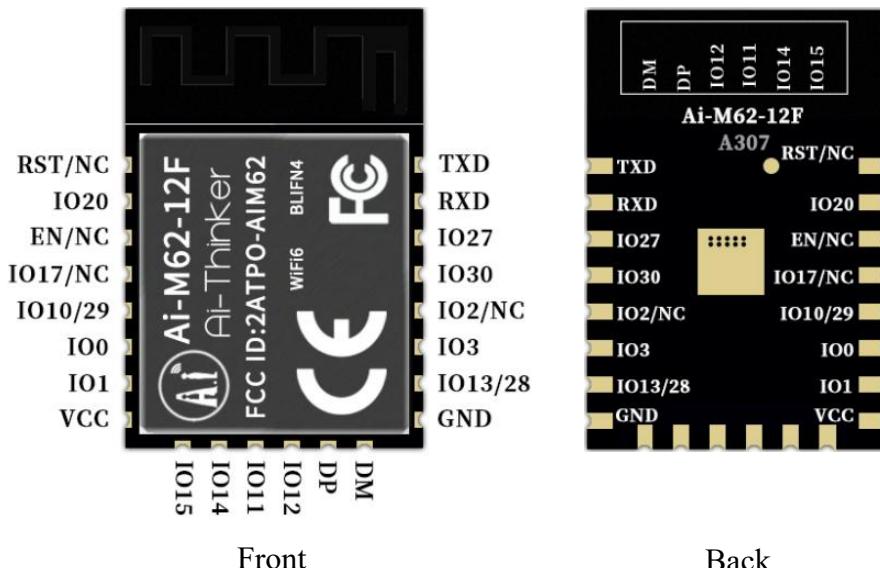


Figure 6 pin diagram

Table 6 Pin Function Definition table

| No. | Name | Functional description |
|-----|---------|---|
| 1 | RST/NC | The default is floating, and it can be customized as a reset pin, which is active at low level. If you need to use it, please contact Ai-Thinker |
| 2 | IO20 | GPIO20/SPI_SS/I2S_BCLK/I2C_SCL/ADC_CH0/PWM0 |
| 3 | EN/NC | By default, it is enabled as a chip, active at high level, and cannot be used at the same time as RST |
| 4 | IO17/NC | Available by default, the IO port is shared with the 32.768KHz crystal output PIN pin inside the module. If the module of the internal patch 32.768KHz crystal oscillator is customized, the IO is in NC state. GPIO17/SPI_SCLK/I2S_FS/I2C_SDA/XTAL_32K_OUT/PWM0 |
| 5 | IO10/29 | The default is IO29,GPIO29/SPI_SCLK/I2S_FS/I2C_SDA/PWM0 |
| 6 | IO0 | GPIO0/SPI_SS/I2S_BCLK/I2C_SCL/ADC_CH9/PWM0 |
| 7 | IO1 | GPIO1/SPI_SCLK/I2S_FS/I2C_SDA/ADC_CH8/PWM0 |
| 8 | VCC | 3.3V power supply; The output current of external power supply is recommended to be above 500mA |
| 9 | IO15 | Available by default, this IO port is shared with Flash in the module. If a module with external Flash is customized, the IO is not available. For use, please contact Ai-Thinker. GPIO15/SPI_MOSI/I2S_DO/I2S_RCLK_O/I2C_SDA/PWM0 |

| | | |
|----|---------|--|
| 10 | IO14 | Available by default, this IO port is shared with Flash in the module. If a module with external Flash is customized, the IO is not available. For use, please contact Ai-Thinker. GPIO14/SPI_MISO/I2S_DI/I2S_RCLK_O/I2C_SCL/ADC_CH4/PWM0 |
| 11 | IO11 | Available by default, this IO port is shared with Flash in the module. If a module with external Flash is customized, the IO is not available. For use, please contact Ai-Thinker. GPIO11/SPI_MOSI/I2S_DO/I2S_RCLK_O/I2C_SDA/PWM0 |
| 12 | IO12 | Available by default, this IO port is shared with Flash in the module. If a module with external Flash is customized, the IO is not available. For use, please contact Ai-Thinker. GPIO12/SPI_SS/I2S_BCLK/I2C_SCL/ADC_CH6/PWM0 |
| 13 | DP | USB_DP |
| 14 | DM | USB_DM |
| 15 | GND | Grounding |
| 16 | IO13/28 | The default is IO28,GPIO28/SPI_SS/I2S_BCLK/I2C_SCL/ADC_CH11/PWM0 |
| 17 | IO3 | GPIO3/SPI_MOSI/I2S_DO/I2S_RCLK_O/I2C_SDA/ADC_CH3/PWM0 |
| 18 | IO2/NC | The default NC is not available. If you need to use it, please contact Ai-Thinker. If elicited, support Bootstrap/GPIO2/SPI_MISO/I2S_DI/I2S_RCLK_O/I2C_SCL/ADC_CH2/PWM0 |
| 19 | IO30 | GPIO30/SPI_MISO/I2S_DI/I2S_RCLK_O/I2C_SCL/PWM0 |
| 20 | IO27 | GPIO27/SPI_MOSI/I2S_DO/I2S_RCLK_O/I2C_SDA/ADC_CH10/PWM0 |
| 21 | RXD | RXD(GPIO22/SPI_MISO/I2S_DI/I2S_RCLK_O/I2C_SCL/PWM0) |
| 22 | TXD | TXD(GPIO21/SPI_SCLK/I2S_FS/I2C_SDA/ADC_RCAL_VOUT/PWM0) |

Note: 1. GPIO2 is used as a Bootstrap. When the power-on moment is high, the module enters the burning mode. When the power-on moment is low, the module starts normally.

5. Schematic diagram

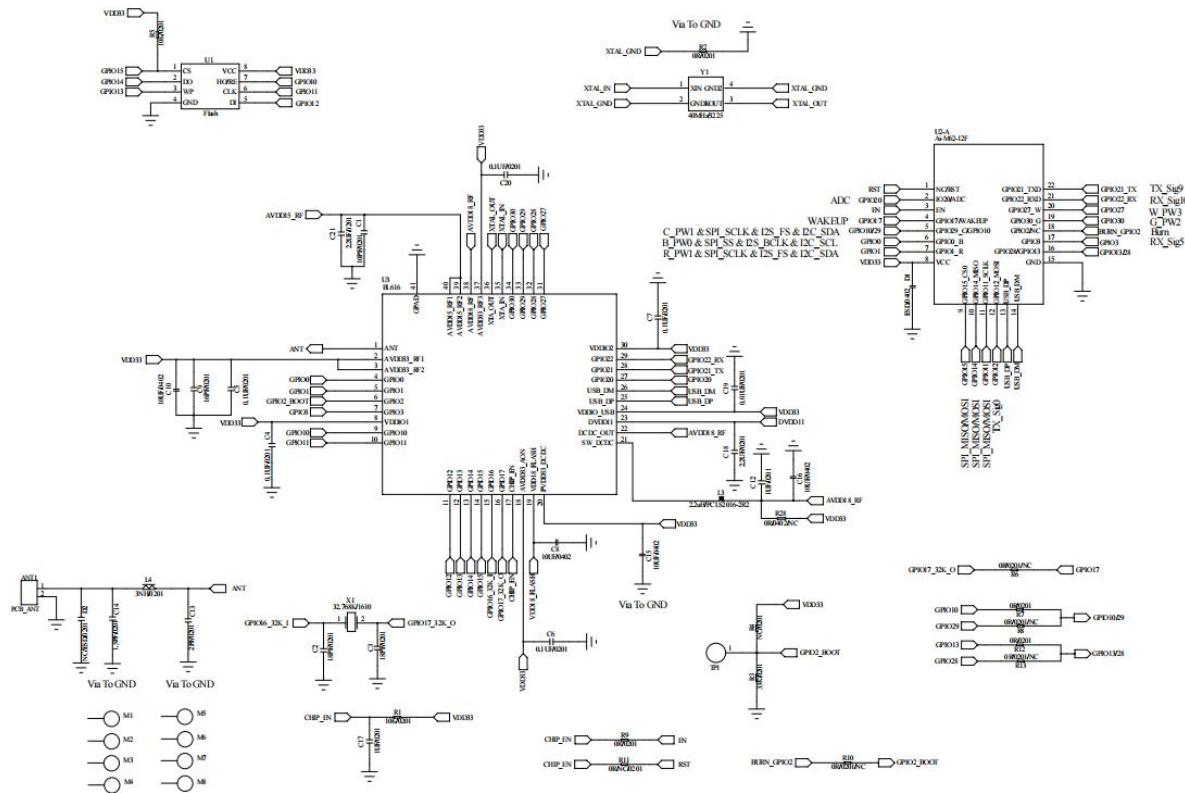


Figure 7 Schematic Diagram

6. Antenna parameters

6.1. Schematic of Antenna Test Prototype

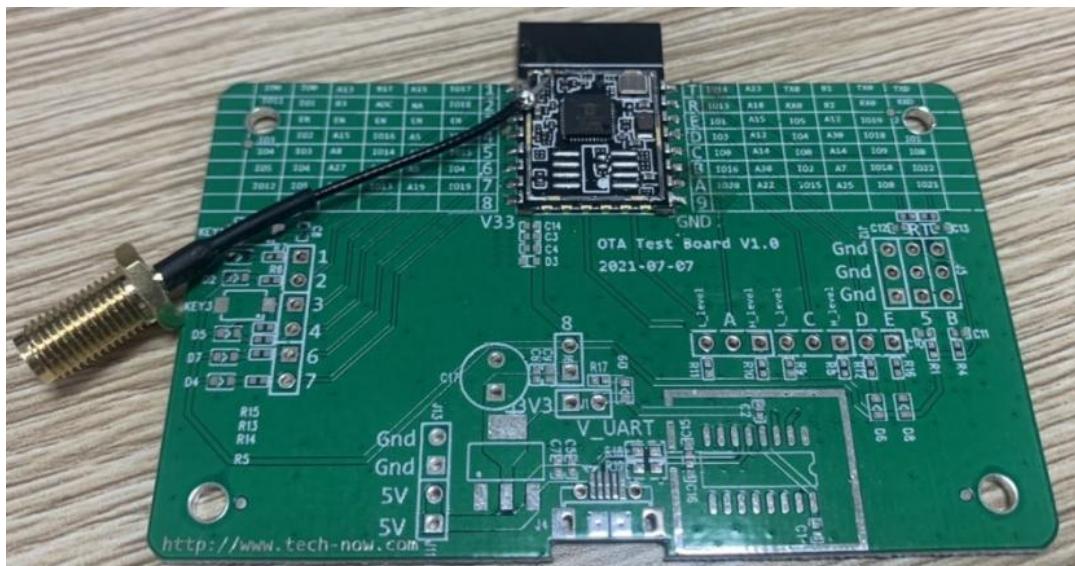


Figure 8 schematic diagram of antenna test prototype

6.2. Antenna s parameter

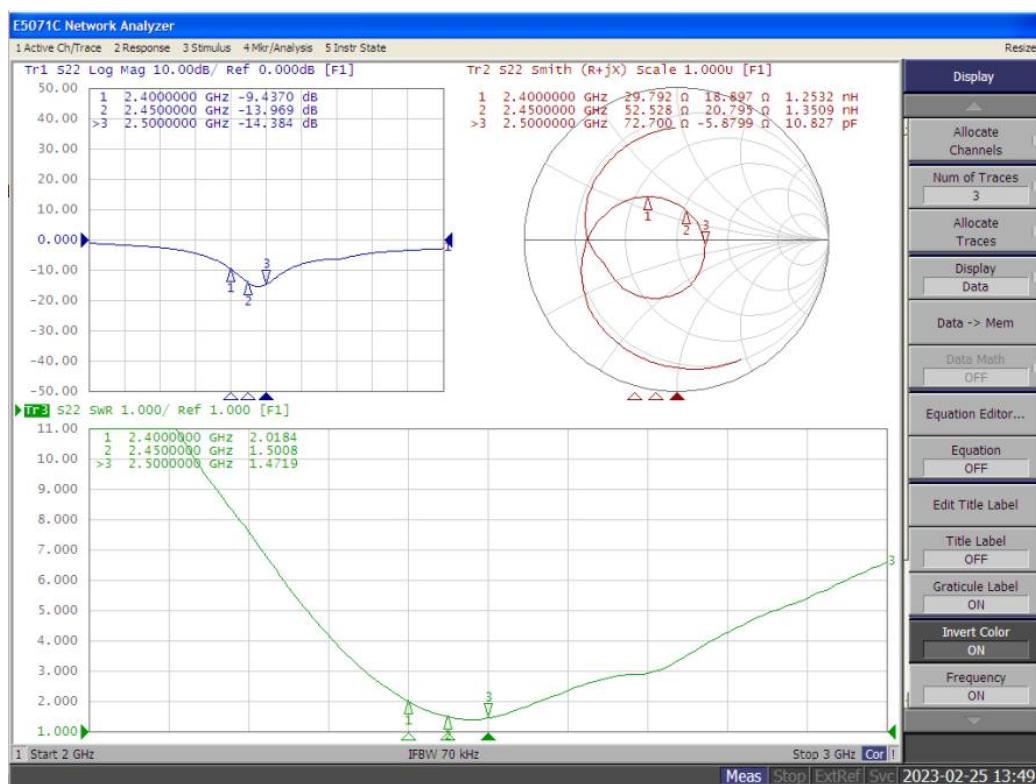


Figure 9 antenna s parameters

6.3. Antenna Gain and Efficiency

Table 7 Antenna Gain and Efficiency

| Frequency ID | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
|----------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| Frequency(MHz) | 2400 | 2410 | 2420 | 2430 | 2440 | 2450 | 2460 | 2470 | 2480 | 2490 | 2500 |
| Gain (dBi) | 0.15 | 0.35 | 0.33 | 0.54 | 0.93 | 1.00 | 1.21 | 1.32 | 1.18 | 1.14 | 1.23 |
| Efficiency (%) | 46.44 | 48.21 | 46.87 | 48.02 | 51.00 | 51.53 | 54.15 | 55.61 | 54.13 | 53.62 | 54.38 |

6.4. Antenna field pattern

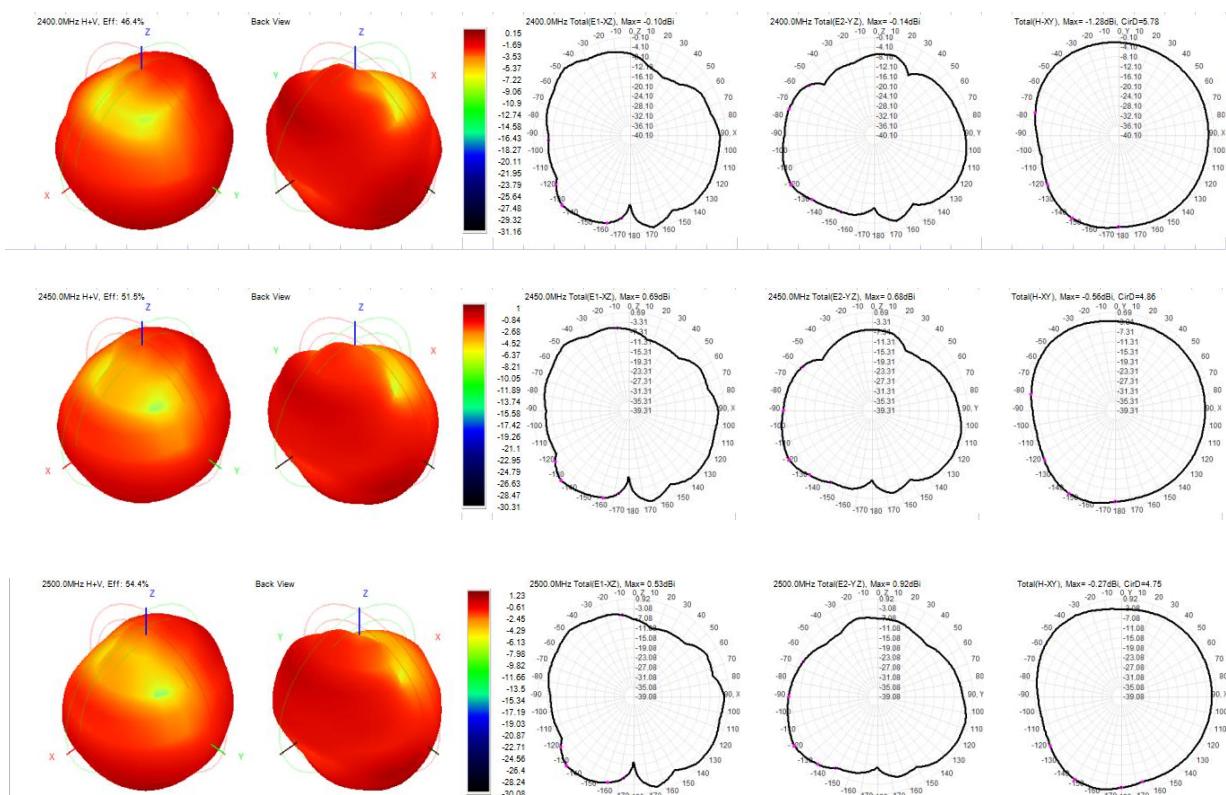


Figure 10 antenna field diagram

7. Design guidance

7.1. Application guidance circuit

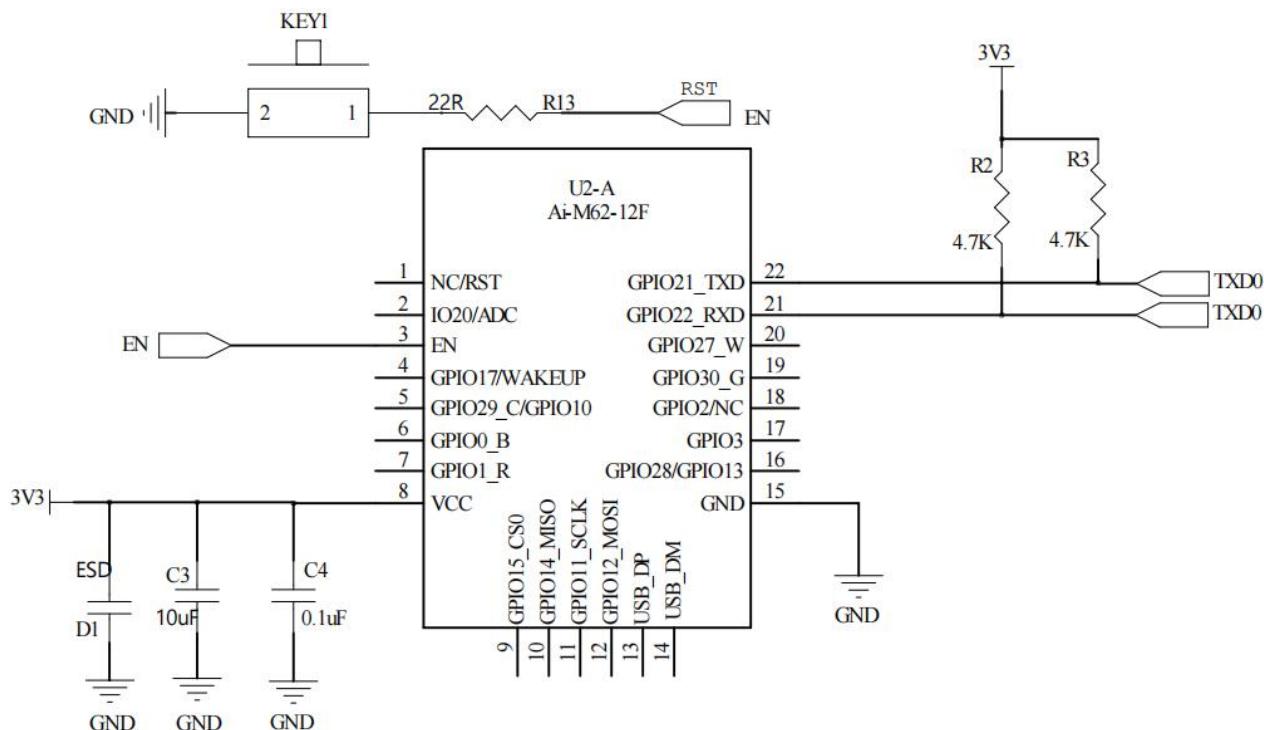


Figure 11 Application Guidance Circuit

- IO2 is the module start control pin, which is in normal working mode at low level and in firmware burning mode at high level. The default low level inside the chip.
- IO2/NC, not available by default
- IO11/IO12/IO14/IO15, available by default. These IO ports are shared with the internal Flash of the module. If the module with external Flash is customized, it cannot be used. For use, please contact Ai-Thinker.
- IO17/NC, available by default. The IO port is shared with the 32.768KHz crystal output PIN pin inside the module. If the module of the internal patch 32.768KHz crystal oscillator is customized, the IO is in NC state.

7.2. Recommended PCB package size

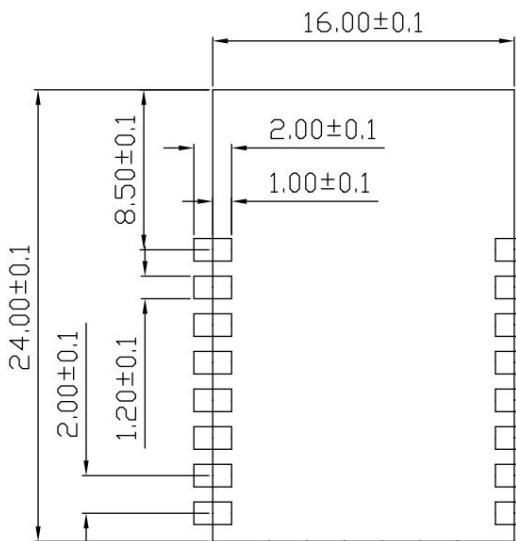


Figure 12 Recommended PCB Package Size

7.3. Antenna layout requirements

- In the installation position on the motherboard, the following 2 methods are recommended:

Scheme 1: Place the module on the edge of the main board, and the antenna area extends out of the edge of the main board.

Scheme 2: Place the module on the edge of the motherboard, and the edge of the motherboard hollowed out an area at the antenna position.

- In order to meet the performance of the on-board antenna, it is forbidden to place metal parts around the antenna, away from high-frequency devices.

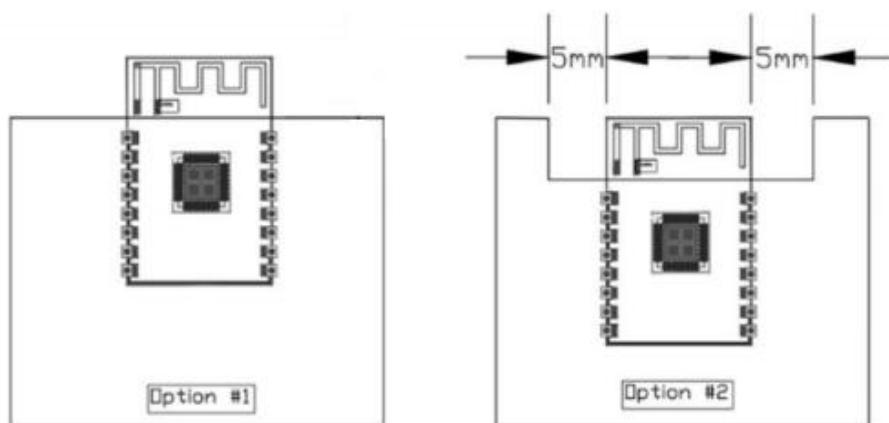


Figure 13 schematic diagram of antenna layout

7.4. Power supply

- Recommended 3.3V voltage, peak current above 500mA.
- LDO is recommended for power supply; If DC-DC is used, it is recommended that the ripple be controlled within 30mV.
- The DC-DC power supply circuit suggests to reserve the position of the dynamic response capacitor, which can optimize the output ripple when the load changes greatly.
- It is recommended to add ESD devices to the 3.3V power interface.

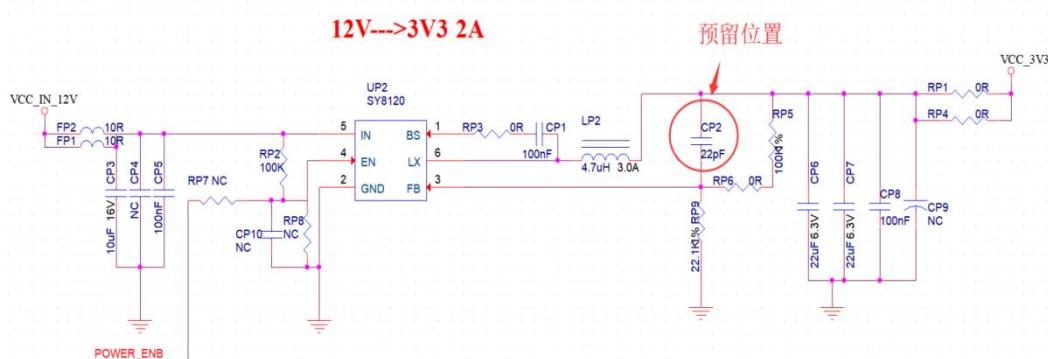


Figure 14 DC-DC step-down circuit diagram

7.5. GPIO

- Some IO ports are led out from the periphery of the module. If you need to use a resistor of 10-100 ohms in series on the IO port. This can suppress overshoot and make the level on both sides more stable. It is helpful for both EMI and ESD.
- For the up and down of the special IO port, please refer to the instructions in the specification, which will affect the startup configuration of the module.
- The IO port of the module is 3.3V. If the level of the IO port of the main control and the module does not match, a level conversion circuit needs to be added.
- If the IO port is directly connected to the peripheral interface or terminals such as pins, it is recommended to reserve ESD devices at the IO port wiring close to the terminals.

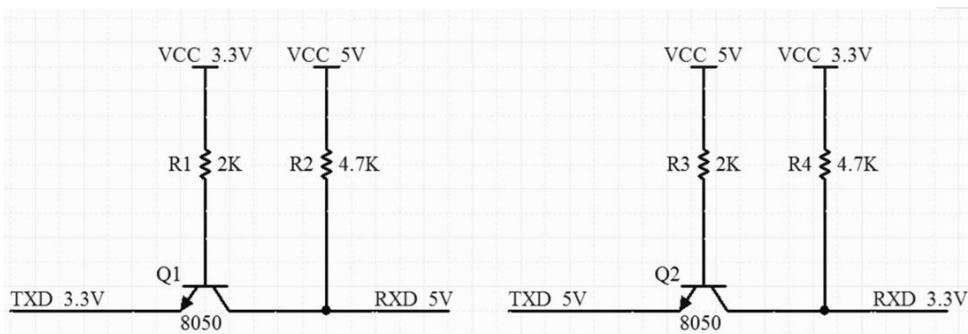


Figure 15 Level Shift Circuit

8. Storage conditions

The product sealed in the moisture-proof bag should be stored in a non-condensing atmospheric environment of $<40^{\circ}\text{C}/90\%\text{RH}$.

The moisture sensitivity level MSL of the module is level 3.

After the vacuum bag is unpacked, it must be used within 168 hours at $25 \pm 5^{\circ}\text{C}/60\%\text{RH}$, otherwise it needs to be baked before it can be put on line again.

9. Reflow Soldering Curve

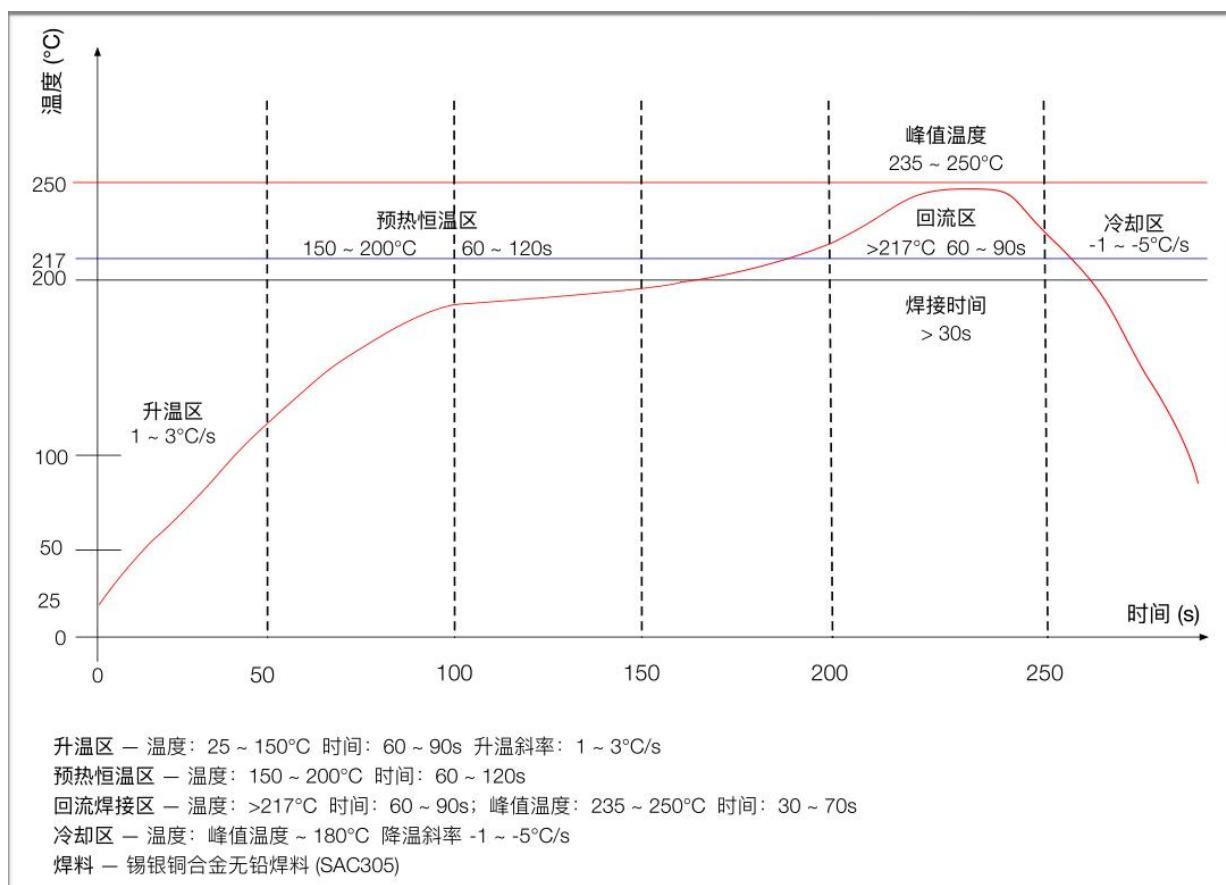


Figure 16 reflow soldering graph

10. Product packaging information

The Ai-M62-12F module adopts braided packaging, 800 pcs/disk. As shown in the following figure:



Figure 17 packing tape drawing

11. Contact us

[Ai-Thinker official website](#)

[Office forum](#)

[Develop DOCS](#)

[LinkedIn](#)

[Tmall shop](#)

[Taobao shop](#)

[Alibaba shop](#)

[Technical support email: support@aithinker.com](#)

[Domestic business cooperation: sales@aithinker.com](#)

[Overseas business cooperation: overseas@aithinker.com](#)

Company Address: Room 403-405,408-410, Block C, Huafeng Smart Innovation Port, Gushu 2nd Road, Xixiang, Baoan District, Shenzhen.

Tel: +86-0755-29162996



WeChat mini program



WeChat official account

Disclaimer and copyright notice

The information in this article,including the URL address for reference,is subject to change without notice.

The document is provided "as is" without any guarantee responsibility,including any guarantee for merchantability,suitability for a specific purpose,or non-infringement,and any guarantee mentioned elsewhere in any proposal,specification or sample.This document does not bear any responsibility,including the responsibility for infringement of any patent rights arising from the use of the information in this document.This document does not grant any license for the use of intellectual property rights in estoppel or other ways,whether express or implied.

The test data obtained in the article are all obtained from Ai-Thinker's laboratory tests, and the actual results may vary slightly.

All brand names,trademarks and registered trademarks mentioned in this article are the property of their respective owners, and it is hereby declared.

The final interpretation right belongs to Shenzhen Ai-Thinker Technology Co.,Ltd.

Notice

Due to product version upgrades or other reasons,the contents of this manual may be changed.

Shenzhen Ai-Thinker Technology Co.,Ltd.reserves the right to modify the contents of this manual without any notice or prompt.

This manual is only used as a guide.Shenzhen Ai-Thinker Technology Co.,Ltd. makes every effort to provide accurate information in this manual.However, Shenzhen Ai-Thinker Technology Co.,Ltd. does not guarantee that the contents of the manual are completely free of errors.All statements and information in this manual And the suggestion does not constitute any express or implied guarantee.

Important statement

Ai-Thinker may provide technical and reliability data "as is" (including data sheets), design resources (including design for reference purposes), application or other design recommendations, network tools, security information and other resources (the "these resources") and without warranty without express or implied warranty, including without limitation, adaptability for a particular purpose or infringement of intellectual property rights of any third party. And specifically declares that it is not liable for any inevitable or incidental losses arising from the application or the use of any company products and circuits.

Ai-Thinker reserves the right to the information released in this document (including but not limited to the indicators and product description) and any changes to the Company without notice to automatically replace and replace all the information provided in the previous version of the same document number document.

These resources are available to skilled developers who design Essence products. You will assume all responsibilities for the following: (1) select the appropriate optional products for your application; (2) design, verify, and run your application and products during the full life cycle; and (3) ensure that your application meets all corresponding standards, norms and laws, and any other functional.

Ai-Thinker authorizes you to use these resources only for the application of the Ai-Thinker products described in this resource. Without the permission of Ai-Thinker, no unit or individual shall copy or copy part or all of these resources without authorization, and shall not spread them in any form. You are not entitled to use any other Principal or any third party intellectual property. You shall fully indemnify you for any claims, damages, costs, losses and debts incurred by the result of the use of these resources.

The products available by Ai-Thinker are subject to the terms of sales or other applicable terms attached to the products. Ai-Thinker may provide these resources does not extend or otherwise change the applicable warranty or warranty disclaimer for the product release.